

ExpoDisc White and Warm Balance Filters

Olympus Custom WB Procedures

Olympus E-1

1. Place Camera in “A” Mode and open the aperture all the way.
2. Install the ExpoDisc.
3. Aim camera towards scene or light source and press the One Touch White Balance button on the front of the E-1 (the button to the right of the lens under the red window).
4. Press OK to set WB-01.
5. Take up to four different White Balance presets for use at any future time.
6. Remove Expo Disc, place camera in desired shooting mode, and start shooting.

Evolt 300 – Two methods for taking a reading

Method 1

1. Place Camera in “A” Mode and open the aperture all the way.
2. Install the ExpoDisc.
3. Press the menu button.
4. Press the right arrow button to enter the Camera Tab 2 menu.
5. Press the down arrow button four times to get to the One Touch White Balance icon.
6. Press the right arrow button, you will see ONE TOUCH WB with option YES or NO.
7. Aim camera towards scene or light source and press the OK button on YES.
8. White Balance is now set.
9. Remove Expo Disc, place camera in desired shooting mode, and start shooting.

Method 2*

1. Place Camera in “A” Mode and open the aperture all the way.
2. Install the ExpoDisc.
3. Press the OK button.
4. Aim camera towards scene or light source and press OK on YES.
5. White Balance in now set.
6. Remove Expo Disc, place camera in desired shooting mode, and start shooting.

*Directions for setting up the “OK” button on your Evolt to take a white balance reading.

1. Press the menu button.
2. Go to the "Tool" 1 tab and press the right arrow button
3. Press the up arrow once to select CUSTOM OK.
4. Press the right arrow button on CUSTOM OK.
5. Select SHORTCUT and press right arrow button.
6. Press the down arrow button once to the ONE TOUCH WB Icon.
7. Press OK three times.
8. The OK button is now programmed to take ONE TOUCH WB readings.