

# **ExpoDisc White and Warm Balance Filters**

## **Fuji S2/S3 Custom WB Procedures**

1. Install the ExpoDisc and set the camera to Manual Focus mode.
2. Allow the camera to set an automatic exposure using the “P”, “S” or “A” modes, or set the correct manual exposure in “M” mode.
3. Press the “MENU/OK” button.
4. Arrow down to Select “CUSTOM WB”, then arrow right to ready the camera.
5. Push “F1” (custom WB 1), or “F4” (custom WB 2) button to select either the “Cus 1”, or “Cus 2” white balance settings.
6. Aim the camera in the appropriate direction for the given lighting condition and press the shutter release button. See the ExpoDisc Instruction manual for more information on where to aim the camera.
7. If the exposure is measured correctly, “COMPLETED” appears on the LCD screen.
8. Press the “MENU/OK” button to confirm/approve the setting.
9. Press the “MENU/OK” button to exit menu.
10. Remove the ExpoDisc, return camera to auto focus mode (if desired), and start shooting.

If you see the “!OVER” error message, then the subject is too bright. You can use negative (-) exposure compensation value and set white balance again.

If you see the “!UNDER” error message, then the subject is too dark. You can use positive (+) exposure compensation value and set the white balance again.

If you see the “Out of Range” error message, then the light in which you are attempting to set a custom white balance is either too warm (below 2,800° Kelvin) or too cool (above 9,500° Kelvin). The camera is incapable of effectively neutralizing the colorcast of the light.