

# **ExpoDisc Professional Digital White Balance Filters**

## **Canon Custom WB Procedures**

### **Canon 300D Digital Rebel and Digital Rebel 350D XT**

1. Install the ExpoDisc and set the camera to Manual Focus mode.
2. Allow the camera to set an automatic exposure using the “P”, “S” or “A” modes, or set the correct manual exposure in “M” mode.
3. Push and hold the “WB” button <down arrow> on the back of the camera while rotating the main dial on top of the camera to select the “AWB” icon in the control panel.
4. Aim the camera in the appropriate direction for the given lighting condition and press the shutter release button. See the ExpoDisc Instruction manual for more information on where to aim the camera.
5. Push the “MENU” button and select <camera icon> tab.
6. Select “CUSTOM WB” using <down arrow>, then push the “SET” button.
7. Push the “SET” button again to select the ExpoDisc “gray frame” just taken.
8. Push the “MENU” button to exit the menu.
9. Push and hold the “WB” button <down arrow> on the back of the camera while rotating the main dial on top of the camera to select the “CUSTOM WB” icon in the control panel.
10. Remove the ExpoDisc, return camera to auto focus mode (if desired), and start shooting.

### **Canon 10D, Canon 20D, Canon 30D, Canon 5D**

1. Install the ExpoDisc and set the camera to Manual Focus mode.
2. Allow the camera to set an automatic exposure using the “P”, “S” or “A” Modes, or set the correct manual exposure in “M” mode.
3. Push and hold the “AF-WB” button on top of the camera while rotating the thumb dial to select the “AWB” icon on the control panel LCD.
4. Aim the camera in the appropriate direction for the given lighting condition and press the shutter release button. See the ExpoDisc Instruction manual for more information on where to aim the camera.
5. Push the “MENU” button.
6. Scroll down to “CUSTOM WB” in the menu using the thumb dial, then push the “SET” button in the center of the thumb dial.
7. Push the “SET” button again to select the ExpoDisc “gray frame” just taken.
8. Push the “MENU” button to exit the menu.
9. Push and hold the “AF-WB” button on top of the camera while rotating the thumb dial to select the “CUSTOM WB” icon on the control panel LCD.
10. Remove the ExpoDisc, return camera to auto focus mode (if desired), and start shooting.

## Canon 1D and 1Ds

1. Install the ExpoDisc and set the camera to Manual Focus mode.
2. Allow the camera to set an automatic exposure using the “P”, “S” or “A” modes, or set the correct manual exposure in “M” mode.
3. Press and hold the white “WB” button while turning the thumb dial to select “AWB” in the control panel located below the LCD screen, then release the “WB” button.
4. Aim the camera in the appropriate direction for the given lighting condition and press the shutter release button. See the ExpoDisc Instruction manual for more information on where to aim the camera.
5. Push and hold the “MENU” button while turning thumb dial to select the camera icon, then release “MENU” button.
6. Press and hold the “SELECT” button while turning thumb dial to select “Custom WB”, then release the “SELECT” button.
7. Press and hold the “SELECT” button while turning thumb dial to select desired “gray frame” just taken, then release the “SELECT” button.
8. Press and hold the “SELECT” button while turning thumb dial to select “OK”, then release the “SELECT” button to import the “gray frame” white balance data.
9. Press and hold the white “WB” button while turning the thumb dial to select the “CUSTOM WB” icon in the control panel located below the LCD screen, then release the “WB” button.
10. Remove the ExpoDisc, return camera to auto focus mode (if desired), and start shooting.

## Canon 1D Mark II and 1Ds Mark II

1. Install the ExpoDisc and set the camera to Manual Focus mode.
2. Allow the camera to set an automatic exposure using the “P”, “S” or “A” modes, or set the correct manual exposure in “M” mode.
3. Press and hold the white “WB” button while turning the thumb dial to select “AWB” in the control panel, release the “WB” button.
4. Aim the camera in the appropriate direction for the given lighting condition and press the shutter release button. See the ExpoDisc Instruction manual for more information on where to aim the camera.
5. Press the “MENU” button to access the menu system.
6. Press and hold the “SELECT” button, rotate the thumb dial to access the “camera recording sub menu” <camera icon>, then release the “SELECT” button.
7. Press and hold the “SELECT” button and scroll down to “custom WB” then release the “SELECT” button.
8. Press and hold the “SELECT” button and rotate the thumb dial to select the last picture taken, release the “SELECT” button.
9. Press and hold the “SELECT” button and rotate thumb dial to select “OK” then release the “SELECT” button.
10. Press the menu button to exit menu system.
11. Press and hold the white “WB” button while turning the thumb dial to select “CUSTOM WB” icon in the control panel, release the “WB” button.
12. Remove the ExpoDisc, return camera to auto focus mode (if desired), and start shooting.